


## Parts needed to mount the BZP-ZZ conductive head

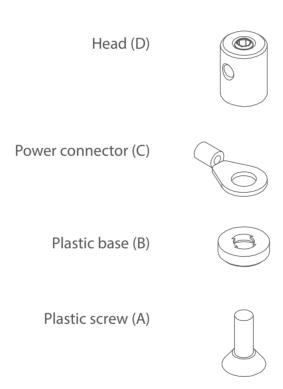

## **Tools needed for mounting:**

- pliers
- drill
- Allen wrench


NOTE! A list of products corresponding with the selected accessories is available at www.KlusDesign.eu

www.KlusDesign.eu 1



1. Drill a 5mm diameter hole in the selected extrusion.


**2.** Bevel the hole so that the plastic screw head fits in.






 ${f 3.}$  Mount the plastic screw (A), plastic base (B), the small power connector (C) and the head (D) onto the screw



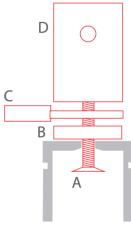


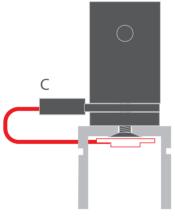

**4.** Mount the LED strip and run the cable from the LED to the power

 ${f 5}_{f \bullet}$  Mount the arm in the head (D). Block the arm by tightening the pressure screw in the head with the Allen wrench.



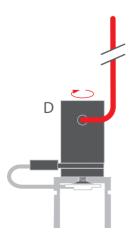



www.KlusDesign.eu 2