


Parts needed to mount the PUSZ-PRET-LEB fastener

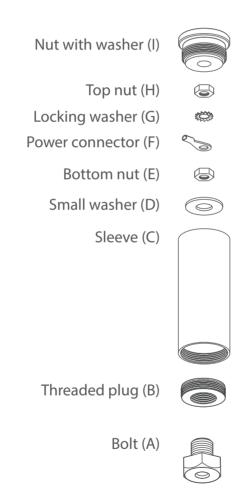

Tools needed for mounting:


- Allen wrench
- drill
- pliers

NOTE! A list of products corresponding with the selected accessories is available at www.klusdesign.eu



 ${\bf 1}$. Drill holes with a diameter of 6mm in the back of the extrusion. One hole per fastener.

2. Insert the threaded plug (B) over the drilled hole and tighten the bolt(A) at the bottom. Run a cable with one pole through the hole in the screw and mount the LED strip in the extrusion

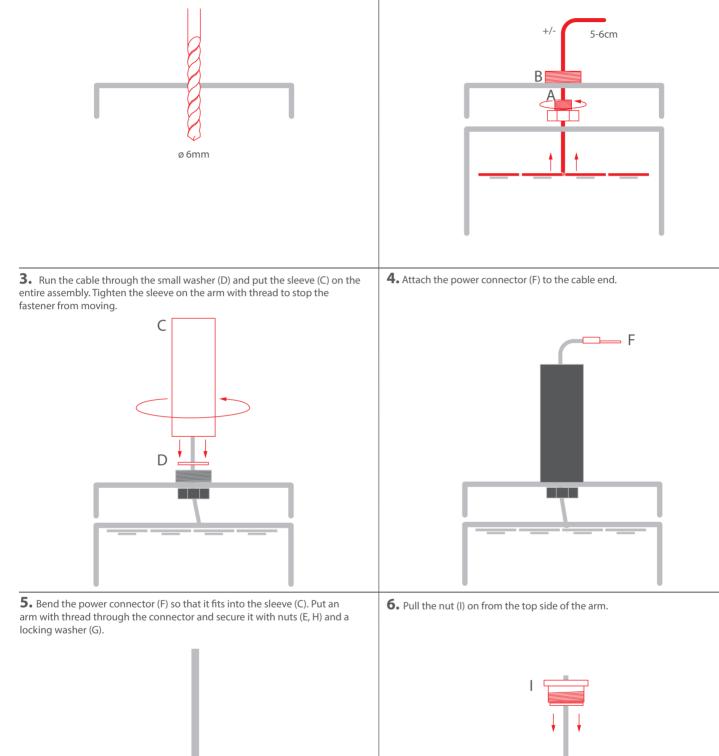

H [] G ###

Ε

С



