

Parts needed to mount the PUSZ-LIN-LEB fastener



0

Nut with washer (G)

Clamp (F)







Sleeve (C)





Threaded plug (B)

Bolt (A)

Tools needed for mounting:


- Allen wrench
- drill
- pliers

NOTE! A list of products corresponding with the selected accessories is available at www.klusdesign.eu






2. Mount LED strips in the extrusion. Insert the threaded plug (A) into the small locks of the profile and place it over the drilled hole. Run a short cable (approx. 5-6cm) from one pole of a LED strip.

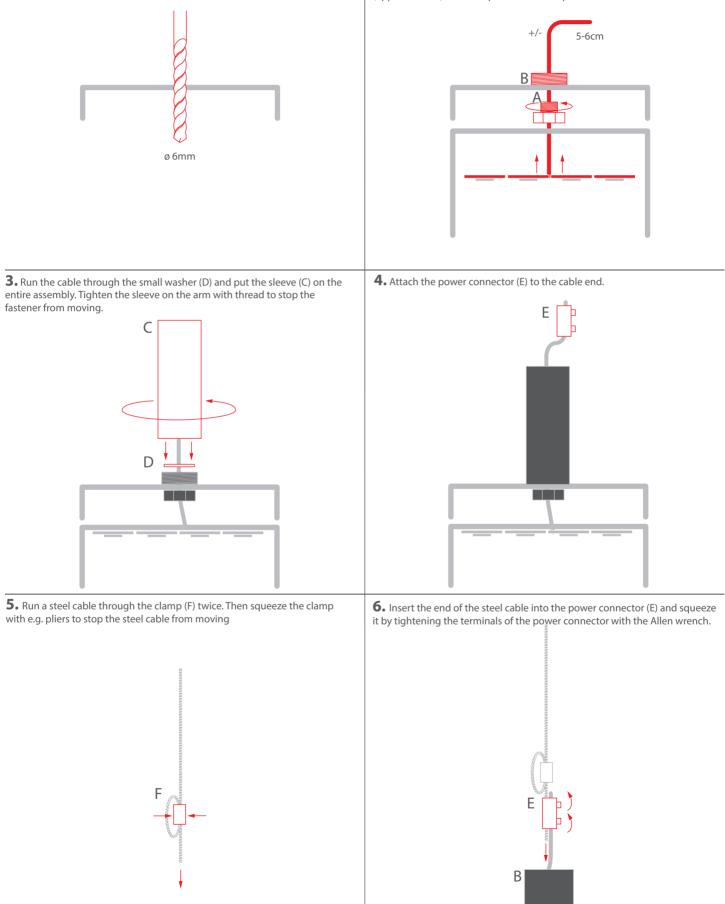



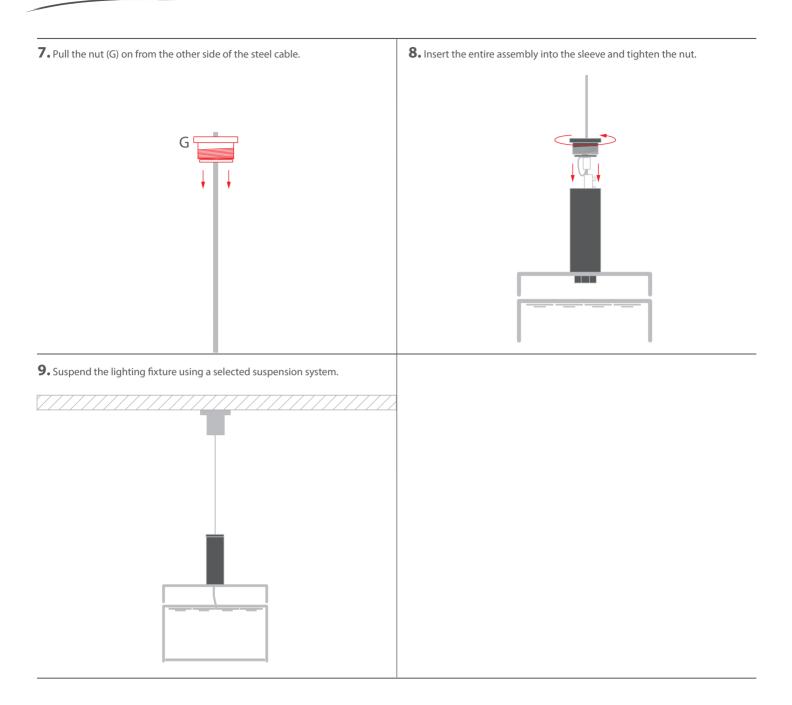

KLUŚ_® Inspiring Solutions